

1 Setting Up the Speaker Stand

Loosen the bottom tripod adjustment knob (counter clockwise).



Turn the stand upside down and separate the legs.



Turn the stand right side up and while holding above ground, push the collar down until the legs are extended and leg braces are parallel to the ground.




Adjust the inner tube to the desired height (best performance with speaker above crowd level).

Tighten the tripod height adjustment knob (clockwise).

Tighten the bottom tripod adjustment knob (clockwise).

2 Setting Up the Liberty Unit

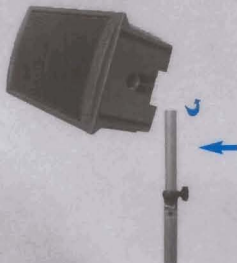

Line up the speaker stand port with the bottom of the Liberty's base. Place the Liberty on the speaker stand.



3 Managing the Optional Built-in CD Unit

CD player is automatically active when you turn on the power. When CD is inserted, indicator light illuminates.



Insert disk into CD player

Push PLAY to begin playback



Volume control can be adjusted using the CD VOLUME knob on the back panel.

Track skip features can be utilized by pressing either the UP or DOWN buttons. Press and hold either UP or DOWN buttons to fast forward or rewind.


4 Battery Maintenance

- Recharge battery after every use
- Liberty may be plugged into AC power when not in use
- Liberty battery life is approx 2-4 years, depending on use
- Battery may be purchased directly from Anchor Audio, Inc.

5 Wireless Functions

A wireless microphone is included and batteries are installed. To operate, turn the POWER switch ON.

Frequency selection

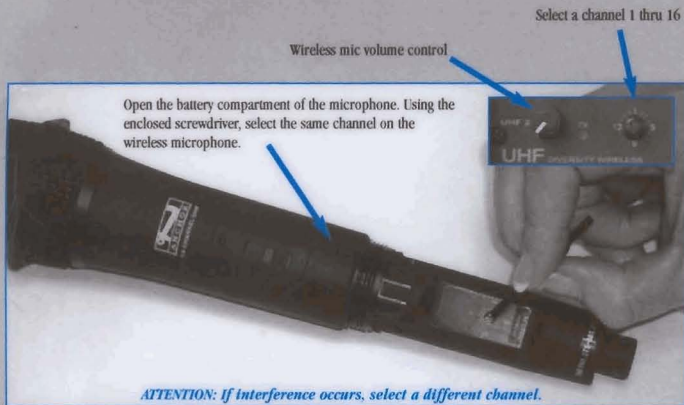

Use the WIRELESS MIC VOLUME to control the sound level

Speech Projection should be in the "on" position for large crowds. Speech Projection should be in the "off" position for full range music.

Troubleshooting

Wireless mic performance - "Drop Out" in audio

1. Verify that mic battery is good (indicator should be solid).

Helpful tips

1. Do not operate mic closer than 15 ft. or directly in front of Xtreme.
2. Reduce input volume and speak louder.
3. Hold mic close to your mouth.

6 Adding an unpowered companion speaker to the Liberty

The first Liberty (6000) can power a second Liberty (6001):

- A speaker cable is included
- 1. Plug one end into the SPEAKER OUT of the LIB-6000HCU1
- 2. Plug one end into the SPEAKER INPUT jack of the LIB-6001




Safety strap and cord wrap

To secure the Liberty, attach the adjustable safety strap to the unit's handle. Clip to wall hook or fence. Use the tie back cords to secure the audio and power cable to the speaker stand base.

Speaker Placement

Outdoor or Indoor Events for up to 1,000 people

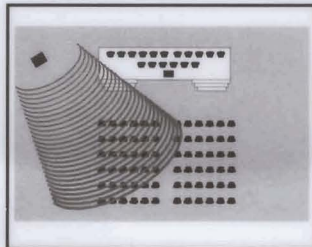

Outdoor or Indoor Events for up to 2,000 people

